


SCC-643(P) PROTOCOL FUNCTION TABLE

(Firmware V1.0)

1. PROTOCOL ID: 2

- 1) **Maker** : VICON HALF
- 2) **Dip Switch** : Set 5,6,7,8 pin of SW501. (Protocol Select)

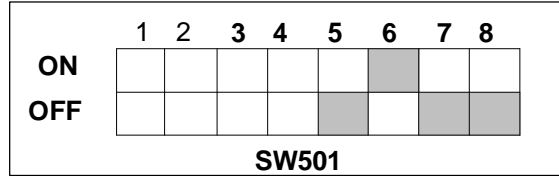

Refer to SCC-643 User's Manual
 SW501 1~2 : RS-485 Termination
 3~4 : Baud Rate

3) Function

	VICON (V1300X-DVC)	SCC-643
1	Pan/Tilt/Zoom/Focus/Iris	Pan/Tilt/Zoom/Focus/Iris
2	RUN MODE : PP ENTER ꞑ # (1~89) ꞑ PP ENTER	Go to Preset (1 ~ 89)
3	PGM MODE: PP ENTER ꞑ # (1~89) ꞑ PP ENTER	Save Preset (1 ~ 89)
4	RUN MODE : PP ENTER ꞑ # (90) ꞑ PP ENTER	Menu On/Off
5	RUN MODE : PP ENTER ꞑ # (91) ꞑ PP ENTER	Menu Mode : ENTER Key
6	RUN MODE : PP ENTER ꞑ # (92) ꞑ PP ENTER	Scan Start
7	RUN MODE : PP ENTER ꞑ # (93) ꞑ PP ENTER	Auto Pan Start
8	RUN MODE : PP ENTER ꞑ # (94) ꞑ PP ENTER	Pattern 1
9	RUN MODE : PP ENTER ꞑ # (95) ꞑ PP ENTER	Pattern 2
10	RUN MODE : PP ENTER ꞑ # (96) ꞑ PP ENTER	Pattern 3
11	RUN MODE : PP ENTER ꞑ # (97) ꞑ PP ENTER	Menu Mode: ꞑ
12	RUN MODE : PP ENTER ꞑ # (98) ꞑ PP ENTER	Alarm Reset
13	RUN MODE : PP ENTER ꞑ # (99) ꞑ PP ENTER	Camera Reset
14	Joystick Up	Menu Mode: ꞑ Key
15	Joystick Down	Menu Mode: ꞑ Key
16	Joystick Left	Menu Mode: ꞑ Key
17	Joystick Right	Menu Mode: ꞑ Key


ꞑ It is used to select 'SIZE' and 'POSITION' in Setup Menu.

(**MAIN MENU ** ꞑ CAMERA... ꞑ MOTION DET ON ꞑ AREA USER... or
 **MAIN MENU ** ꞑ VIDEO SET... ꞑ IRIS ALC... ꞑ AREA USER...)


2. PROTOCOL ID : 3, 4

- 1) **Maker** : Panasonic HALF(3) / FULL(4)
 2) **Dip Switch** : Set 5,6,7,8 pin of SW501.(Protocol Select)

Panasonic **HALF** Duplex

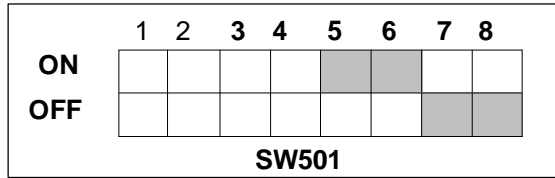

Panasonic **FULL** Duplex

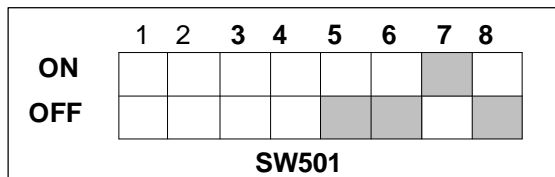

SW501 1~2 : RS-485 Termination (Refer to SCC-643 Owner's Instructions)

3~4 : Baud Rate

Baud Rate	SW501-3	SW501-4
19200BPS	OFF	OFF
9600BPS	ON	OFF
4800BPS	OFF	ON
2400BPS	ON	ON

3) Function 1

	PANASONIC WV- CU161 Controller	SCC-643
1	ⓂCAM ADDR	CAMERA ADDR Select
2	Pan/Tilt/Zoom/Focus/Iris	Pan/Tilt/Zoom/Focus/Iris
3	#(1~60) Ⓜ PRESET SET	Go to Preset (1 ~ 60)
4	CAMERA SETUP	Camera Menu On/Off
5	PRESET SET	Menu Mode : Enter Key
6	HOME ESC	Menu Mode : Ⓜ
7	#(61) Ⓜ PRESET SET	Pattern 1
8	#(62) Ⓜ PRESET SET	Pattern 2
9	#(63) Ⓜ PRESET SET	Pattern 3
10	#(64) Ⓜ PRESET SET	Camera Reset
11	#(1) Ⓜ AUTO	Auto Pan
12	#(2) Ⓜ AUTO	Scan
13	#(3) Ⓜ AUTO	Alarm Reset
14	Joystick Up (2)	Menu Mode: 'Ⓜ' Key
15	Joystick Down (8)	Menu Mode: 'Ⓜ' Key
16	Joystick Left (4)	Menu Mode: 'Ⓜ' Key
17	Joystick Right (6)	Menu Mode: 'Ⓜ' Key

4) Function 2

	PANASONIC WV-CU550C Matrix Switcher	SCC-643
1	⏏CAM ADDR	CAMERA ADDR Select
2	Pan/Tilt/Zoom/Focus/Iris	Pan/Tilt/Zoom/Focus/Iris
3	#(1 ~ 54) ⏏ Preset/AF	Go to Preset (1 ~ 54)
4	#(55) ⏏ Preset/AF	Camera Menu On/Off
5	#(56) ⏏ Preset/AF	Menu Mode : Enter Key
6	#(57) ⏏ Preset/AF	Menu Mode : ⏏
7	#(58) ⏏ Preset/AF	Auto Pan
8	#(59) ⏏ Preset/AF	Scan
9	#(60) ⏏ Preset/AF	Alarm Reset
10	#(61) ⏏ Preset/AF	Pattern 1
11	#(62) ⏏ Preset/AF	Pattern 2
12	#(63) ⏏ Preset/AF	Pattern 3
13	#(64) ⏏ Preset/AF	Cam Reset...
14	Joystick Up (2)	Menu Mode: '⏏' Key
15	Joystick Down (8)	Menu Mode: '⏏' Key
16	Joystick Left (4)	Menu Mode: '⏏' Key
17	Joystick Right (6)	Menu Mode: '⏏' Key

⏏ ADDRESS SET : (SSC-643 ADDRESS +1).

⏏ It is used to select 'SIZE' and 'POSITION' in Setup Menu.


(**MAIN MENU ** ⏏ CAMERA... ⏏ MOTION DET ON ⏏ AREA USER... or
 **MAIN MENU ** ⏏ VIDEO SET... ⏏ IRIS ALC... ⏏ AREA USER...)

3. PROTOCOL ID : 5, 6


1) **Maker** : AD(American Dynamics) HALF (5) / FULL (6)

2) **Dip Switch** : Set 5,6,7,8 pin of SW501.(Protocol Select)

AD **HALF** Duplex

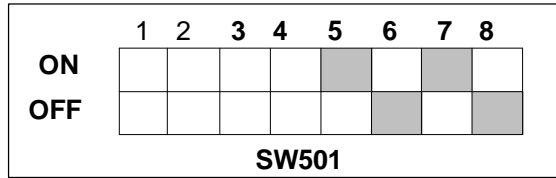

AD **FULL** Duplex

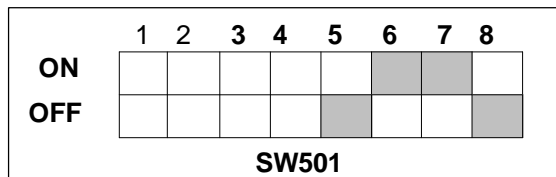

☞ Refer to SCC-643 User's Manual

SW501 1~2 : RS-485 Termination

3~4 : Baud Rate

3) Function

	AD CONTROLLER	SCC-643
1	☞CAM ADDR	Camera Address Select
2	Pan/Tilt/Zoom/Focus/Iris	Pan/Tilt/Zoom/Focus/Iris
3	Mark target1 ~ target7	Save Preset (1 ~ 7)
4	Go to target1 ~ target7	Go to Preset (1 ~ 7)
5	Run Pattern 1	Pattern 1
6	Run Pattern 2	Pattern 2
7	Run Pattern 3	Pattern 3
8	Iris Open ☞ Focus(Far/Near) ☞ Zoom Out	Menu On
9	Iris Close ☞ Focus	Menu Off
10	Focus Far	Enter Key in Setup Menu
11	Focus Near	Menu Mode : ☞
12	Tilt Up	Menu Mode : ☞
13	Tilt Down	Menu Mode : ☞
14	Pan Right	Menu Mode : ☞
15	Pan Left	Menu Mode : ☞
16	Focus Near ☞ Run Pattern 1 ☞ Focus Stop	Scan
17	Focus Near ☞ Run Pattern 2 ☞ Focus Stop	Auto Pan
18	Faster ☞ Zoom Out ☞ Focus Far ☞ Iris Open	Cam Reset

☞ ADDRESS SET : (SSC-643 ADDRESS +1).


☞ It is used to select 'SIZE' and 'POSITION' in Setup Menu.

(**MAIN MENU ** ☞ CAMERA... ☞ MOTION DET ON ☞ AREA USER... or
 **MAIN MENU ** ☞ VIDEO SET... ☞ IRIS ALC... ☞ AREA USER...)

4. PROTOCOL ID : 7

1) **Maker** : Philips HALF

2) **Dip Switch** : Set 5,6,7,8 pin of SW501. (Protocol Select)

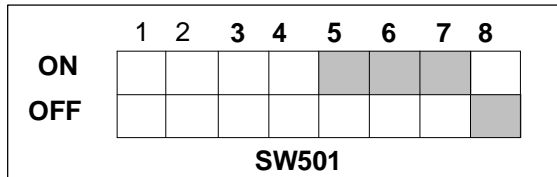

☞ Refer to SCC-643 User's Manual

SW501 1~2 : RS-485 termination

3~4 : Baud Rate.

3) Function

	Philips controller	SCC-643
1	PAN/TILT/ZOOM/FOCUS/IRIS	Pan/Tilt/Zoom/Focus/Iris
2	SET PRESET(1~22)	Set Preset(1~22)
3	GO PRESET(1~22)	Go To Preset(1~22)
4	GO PRESET(23)	Menu On
5	GO PRESET(24)	Menu Mode : Enter Key
6	GO PRESET(25)	Menu Mode : ☞
7	GO PRESET(26)	Pattern 1
8	GO PRESET(27)	Pattern 2
9	GO PRESET(28)	Pattern 3
10	GO PRESET(29)	Scan
11	GO PRESET(30)	Auto Pan
12	GO PRESET(31)	Alarm Reset
13	GO PRESET(32)	Cam Reset
14	Joystick Up	Menu Mode : ☞ Key
15	Joystick Down	Menu Mode : ☞ Key
16	Joystick Left	Menu Mode : ☞ Key
17	Joystick Right	Menu Mode : ☞ Key


☞ is used to select 'SIZE' and 'POSITION' in Setup Menu.

(**MAIN MENU ** ☞ CAMERA... ☞ MOTION DET ON ☞ AREA USER... or
 **MAIN MENU ** ☞ VIDEO SET... ☞ IRIS ALC... ☞ AREA USER...)

5. PROTOCOL ID : 8

1) **Maker** : PELCO-P HALF

2) **Dip Switch** : Set 5,6,7,8 pin of SW501.(Protocol Select)

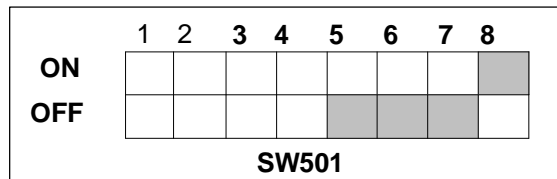

SW501 1~2 : RS-485 termination (Refer to SCC-643 User's Manual)

3~4 : Baud Rate

Baud Rate	SW501-3	SW501-4
19200BPS	OFF	OFF
9600BPS	ON	OFF
4800BPS	OFF	ON
2400BPS	ON	ON

3) Function1

	CM6700 Matrix Switcher	SCC-643
1	⌘#(1~16)⌘CAM	Camera Address Set
2	PAN/TILT/ZOOM/FOCUS/IRIS	PAN/TILT/ZOOM/FOCUS/IRIS
3	Not Defined	Set Preset(1~90)
4	⌘(1~90)⌘PRST	Go To Preset(1~90)
5	Not Defined	Auto Pan On
6	Not Defined	Auto Pan Off
7	⌘(91)⌘PRST	Pattern 1
8	⌘(92)⌘PRST	Pattern 2
9	⌘(93)⌘PRST	Pattern 3
10	⌘(94)⌘PRST	Scan
11	⌘(95)⌘PRST	Menu On
12	⌘(96)⌘PRST	Menu Mode : Enter Key
13	⌘(97)⌘PRST	Menu Mode : ⌘
14	⌘(98)⌘PRST	Alarm Reset
15	⌘(99)⌘PRST	Camera Reset
16	Joystick Up	Menu Mode : ⌘ Key
17	Joystick Down	Menu Mode : ⌘ Key
18	Joystick Left	Menu Mode : ⌘ Key
19	Joystick Right	Menu Mode : ⌘ Key

4) Function2

	CM6800 Matrix Switcher PACOM 2035 Controller	SCC-643
1	; 0 ü#(1~48);æCAM	Camera Address Set
2	PAN/TILT/ZOOM/FOCUS/IRIS	PAN/TILT/ZOOM/FOCUS/IRIS
3	DEF;æPRST;æ#(1~90);æENTER	Set Preset(1~90)
4	PRST;æ#(1~90);æENTER	Go To Preset(1~90)
5	Zone Scan On	Auto Pan On
6	Zone Scan Off	Auto Pan Off
7	PRST;æ#(91);æENTER	Pattern 1
8	PRST;æ#(92);æENTER	Pattern 2
9	PRST;æ#(93);æENTER	Pattern 3
10	PRST;æ#(94);æENTER	Scan
11	PRST;æ#(95);æENTER	Menu On
12	PRST;æ#(96);æENTER	Menu Mode : Enter Key
13	PRST;æ#(97);æENTER	Menu Mode : ; 0 ü
14	PRST;æ#(98);æENTER	Alarm Reset
15	PRST;æ#(99);æENTER	Camera Reset
16	Joystick Up	Menu Mode : ;è Key
17	Joystick Down	Menu Mode : ;é Key
18	Joystick Left	Menu Mode : ;ç Key
19	Joystick Right	Menu Mode : ;æ Key

;**0**üADDRESS SET : (SSC-643 ADDRESS +2).


;**0**üIt is used to select 'SIZE' and 'POSITION' in Setup Menu.

(**MAIN MENU ** ;æ CAMERA... ;æ MOTION DET ON ;æ AREA USER... or
 **MAIN MENU ** ;æ VIDEO SET... ;æ IRIS ALC... ;æ AREA USER...)

6. PROTOCOL ID : 9

1) **Maker** : KALATEL HALF

2) **Dip Switch** : Set 5,6,7,8 pin of SW501.(Protocol Select)

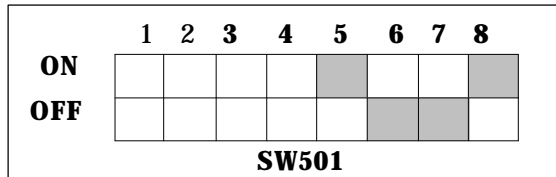

☞ Refer to SCC-643 User's Manual

SW501 1~2 : RS-485 termination (Refer to SCC-643 User's Manual)

3~4 : Baud Rate.

3) Function

	KALATEL	SCC-643
1	PAN/TILT/ZOOM/FOCUS/IRIS	Pan/Tilt/Zoom/Focus/Iris
2	SET PRESET(0~21)	Set Preset(0~21)
3	GO PRESET(0~21)	Go To Preset(0~21)
4	GO PRESET(22)	Menu On
5	GO PRESET(23)	Menu Mode : Enter Key
6	GO PRESET(24)	Menu Mode : ☞
7	GO PRESET(25)	Pattern 1
8	GO PRESET(26)	Pattern 2
9	GO PRESET(27)	Pattern 3
10	GO PRESET(28)	Scan
11	GO PRESET(29)	Auto Pan
12	GO PRESET(30)	Alarm Reset
13	GO PRESET(31)	Cam Reset
14	Joystick Up	Menu Mode : ☞ Key
15	Joystick Down	Menu Mode : ☞ Key
16	Joystick Left	Menu Mode : ☞ Key
17	Joystick Right	Menu Mode : ☞ Key


☞ is used to select 'SIZE' and 'POSITION' in Setup Menu.

(**MAIN MENU ** ☞ CAMERA... ☞ MOTION DET ON ☞ AREA USER... or
 **MAIN MENU ** ☞ VIDEO SET... ☞ IRIS ALC... ☞ AREA USER...)

7. PROTOCOL ID : 10

1) **Maker** : ERNA HALF

2) **Dip Switch** : Set 5,6,7,8 pin of SW501.(Protocol Select)

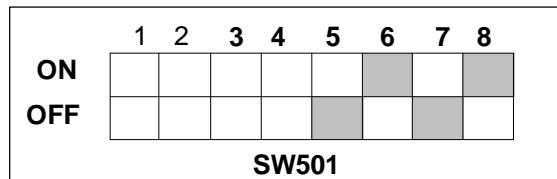

SW501 1~2 : RS-485 termination (Refer to SCC-643 User's Manual)

3~4 : Only 2400 BPS.

3) Function

	ernitec controller	SCC-643
1	⌘#(1~128) ⌘ CAM	Camera Address Select
1	Pan/Tilt/Zoom/Focus/Iris	Pan/Tilt/Zoom/Focus/Iris
2	#(1~120) ⌘ Prepos	Go to Preset (1 ~ 120)
3	#(1~120) ⌘ ESC ⌘ Prepos	Save Preset (1 ~ 120)
4	AUTO ⌘ Sequence	Auto Pan Start/Stop
5	Sequence	Scan Start/Stop
6	121 ⌘ Prepos	Pattern 1
7	122 ⌘ Prepos	Pattern 2
8	123 ⌘ Prepos	Pattern 3
9	124 ⌘ Prepos	⌘
10	125 ⌘ Prepos	Camera Reset
10	'?' (Text On)	Camera Menu
11	'Palm' button	Menu Mode : Enter Key
12	Joystick Up	Menu Mode: '⌘' Key
13	Joystick Down	Menu Mode: '⌘' Key
14	Joystick Left	Menu Mode: '⌘' Key
15	Joystick Right	Menu Mode: '⌘' Key
16	'clock' button	Alarm Reset

⌘ ADDRESS SET : (SCC-643 ADDRESS +1).


⌘ It is used to select 'SIZE' and 'POSITION' in Setup Menu.

(**MAIN MENU ** ⌘ CAMERA... ⌘ MOTION DET ON ⌘ AREA USER... or
 **MAIN MENU ** ⌘ VIDEO SET... ⌘ IRIS ALC... ⌘ AREA USER...)

8. PROTOCOL ID : 11

1) **Maker** : DIAMOND HALF

2) **Dip Switch** : Set 5,6,7,8 pin of SW501.(Protocol Select)

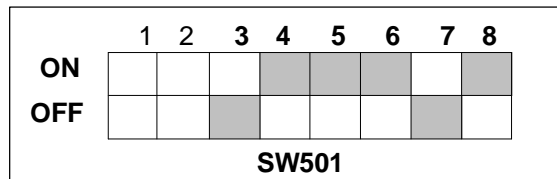

SW501 1~2 : RS-485 Termination (Refer to SCC-643 User's Manual)

3~4 : Baud Rate 9600 BPS.

3) Function

	DIAMOND CONTROLLER	SCC-643
	⌘ # ⌘ CTRL	CAMERA ADDR
1	Pan/Tilt/Zoom/Focus/Iris	Pan/Tilt/Zoom/Focus/Iris
2	#(0~90) ⌘ PSHOT	Go to Preset (0 ~ 90)
3	PRGM ⌘ #(0~90) ⌘ ENTER	Save Preset (0 ~ 90)
4	91 ⌘ PSHOT	Camera Menu
5	92 ⌘ PSHOT	Menu Mode : Enter Key
6	93 ⌘ PSHOT	⌘
7	94 ⌘ PSHOT	Alarm Reset
8	95 ⌘ PSHOT	Scan
9	96 ⌘ PSHOT	Auto Pan
10	97 ⌘ PSHOT	Cam Reset
11	VSCAN ⌘ #(1~3) ⌘ ENTER	Pattern(1~3)
12	Joystick Up	Menu Mode : 'j' Key
13	Joystick Down	Menu Mode : 'k' Key
14	Joystick Left	Menu Mode : 'l' Key
15	Joystick Right	Menu Mode : 'm' Key


⌘ ADDRESS SET : (SSC-643 ADDRESS +1).

⌘ It is used to select 'SIZE' and 'POSITION' in Setup Menu.

(**MAIN MENU ** ⌘ CAMERA... ⌘ MOTION DET ON ⌘ AREA USER... or
 **MAIN MENU ** ⌘ VIDEO SET... ⌘ IRIS ALC... ⌘ AREA USER...)

9. PROTOCOL ID : 12

- 1) **Maker** : VCL HALF (VCLTP PROTOCOL)
 2) **Dip Switch** : Set 5,6,7,8 pin of SW501.(Protocol Select)

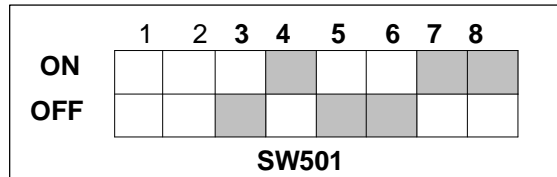

- 1~2 : RS-485 Termination (Refer to SCC-643 User's Manual)
 3~4 : Baud Rate 9600 BPS.

3) Function

	VCL CONTROLLER	SCC-643
	⌘# ⌘ CAM	CAMERA ADDR
1	Pan/Tilt/Zoom/Focus/Iris	Pan/Tilt/Zoom/Focus/Iris
2	#(0~118) ⌘ PRESET	Go to Preset (0 ~ 118)
3	hold PRESET ⌘ #(0~118) ⌘ Release PRESET	Save Preset (0 ~ 118)
4	119 ⌘ PRESET	Camera Menu
5	120 ⌘ PRESET	Menu Mode : Enter Key
6	121 ⌘ PRESET	Menu Mode: ⌘
7	122 ⌘ PRESET	Pattern 1
8	123 ⌘ PRESET	Pattern 2
9	124 ⌘ PRESET	Pattern 3
10	125 ⌘ PRESET	Scan
11	126 ⌘ PRESET	Alarm Reset
12	127 ⌘ PRESET	Cam Reset
13	AUTO PAN (LED ON)	Auto Pan Start
14	AUTO PAN(LED OFF)	Auto Pan Stop
15	Joystick Up	Menu Mode: '↑' Key
16	Joystick Down	Menu Mode: '↓' Key
17	Joystick Left	Menu Mode: '←' Key
18	Joystick Right	Menu Mode: '→' Key

⌘ ADDRESS SET : (SSC-643 ADDRESS +1).

⌘ It is used to select 'SIZE' and 'POSITION' in Setup Menu.

(**MAIN MENU ** ⌘ CAMERA... ⌘ MOTION DET ON ⌘ AREA USER... or
 **MAIN MENU ** ⌘ VIDEO SET... ⌘ IRIS ALC... ⌘ AREA USER...)